


INSTRUCTIONS




x80




x4



x4

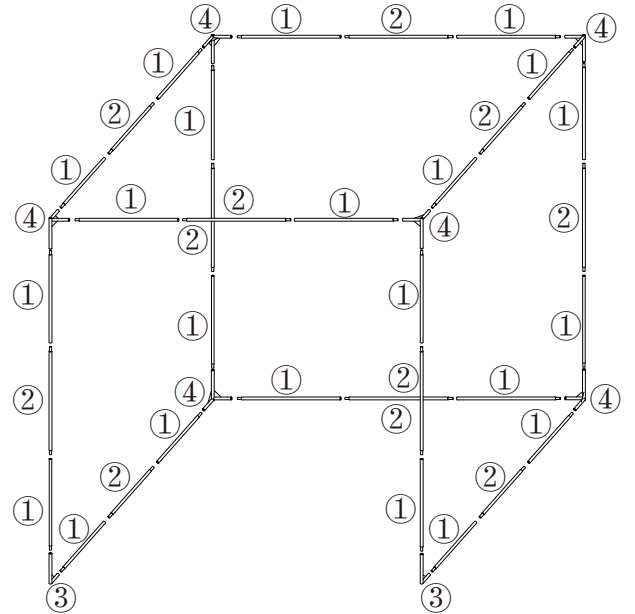


1

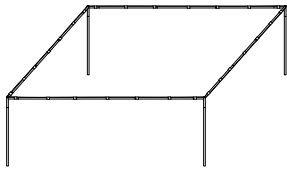


Assemble the top Poles

2

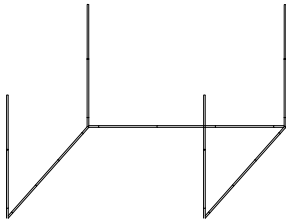


Assemble the bottom Poles

3

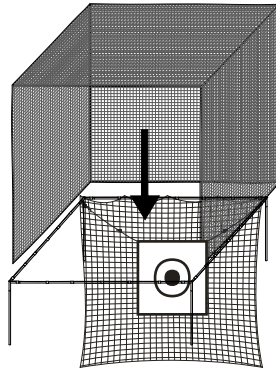


Install the Main Netting and Inner Backstop Netting and Target Fabric



4

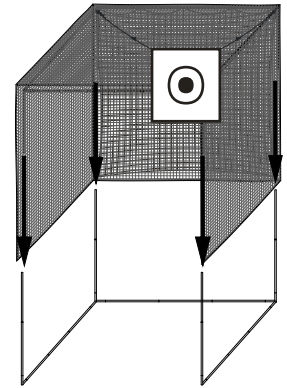

Let the top Poles connect with the bottom Poles

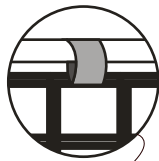

The front stall fabric is fixed with multiple Velcro straps
Also fixed the tow down corners

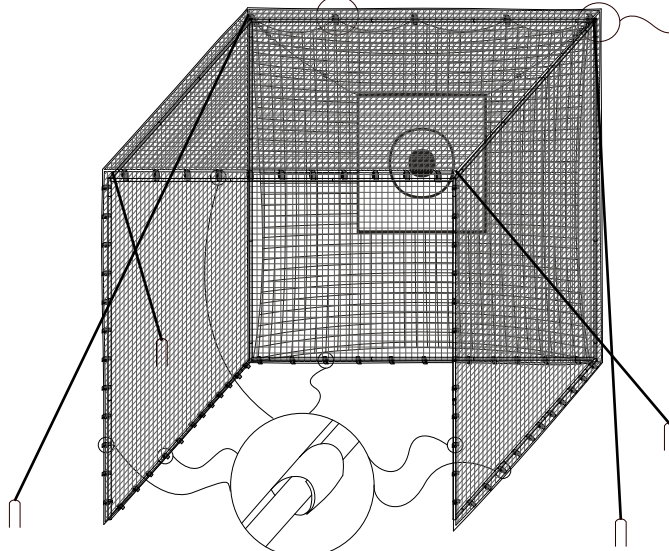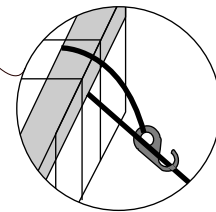

Six sides each side tied 12 Velcro